FireBall™ MP-200 Digital Media Player

Quick Setup

ESCIENT

6640 Intech Blvd., Indianapolis, Indiana 46278
Phone: 800-372-4368 Press "3" For Support
Hours: Monday - Friday 9:00am - 7pm EST
Fax: 317-616-6790
www.escient.com
Email: support@escient.com
Document Number: M22150-02A1
February 2006

1. Unpack Your New FireBall MP-200

- Unpack the FireBall, cables, and accessories (save the box).
- Install the included batteries into the remote.
- Make note of the serial number (located on the back).

SERIAL NUMBER:_____

2. Connect FireBall to your Home Theater

A) Locate the included composite video and analog audio cables.
B) Connect FireBall to the "DVD" or other available A/V input on your receiver or TV **(not shown)**.

Note: You may use optional s-video or component video cables and optional digital audio cables for the best picture and sound quality. Contact your Escient dealer for more information.

3. Connect FireBall MP-200 to a FireBall Multi-Zone DVD Manager

Note: The MP-200 automatically switches between the Escient Movies Guide and the direct DVD input from the multi-zone DVDM Media manager, therefore you are required to run direct video and audio cables from the zone 2 outputs of the multi-zone DVDM to the MP-200.

A) To watch DVD movies in a second zone using the MP-200, connect a composite video cable from VIDEO OUT COMPOSITE 2 on the multi-zone DVDM to the COMPOSITE VIDEO IN on the MP-200.
B) Connect an analog audio cable from ANALOG AUDIO OUT 2 on the multi-zone DVDM to ANALOG AUDIO IN on the MP-200.
C) Connect the included Ethernet cable to your home network.

Note: You may use optional s-video or component video cables and optional digital audio cables for the best picture and sound quality. Contact your Escient dealer for more information.

OR

4. Connect FireBall MP-200 to a FireBall Music Server

FireBall MP-200 streams audio from FireBall Music Servers over an Ethernet network. Connect the FireBall MP-200 to a FireBall Server via an Ethernet hub or router using the included Ethernet cable. The FireBall MP-200 can also stream Internet Radio stations if you have a broadband Internet connection.

- Connect the FireBall MP-200 to your Ethernet network using a standard Ethernet cable (included).

Note: There are optional wireless (WIFI or 802.11) network bridges that will allow you to wirelessly connect your FireBall to your Ethernet network if there are no Ethernet jacks close to where you install FireBall.

3. FireBall MP-200 and FireBall Mulit-Zone DVD Manager

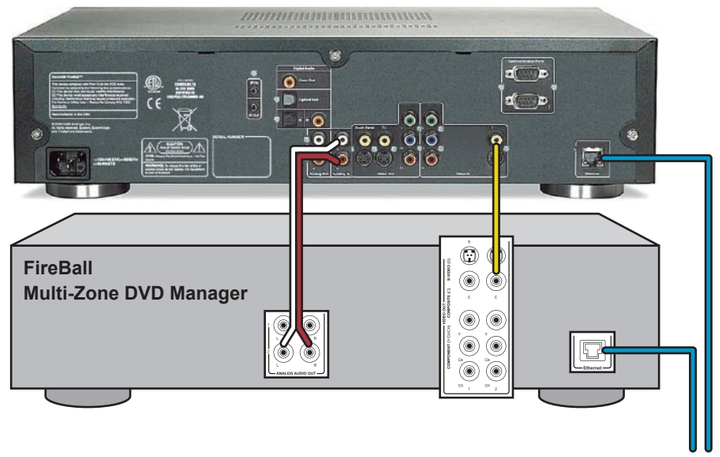

4. FireBall MP-200 and FireBall Music Server

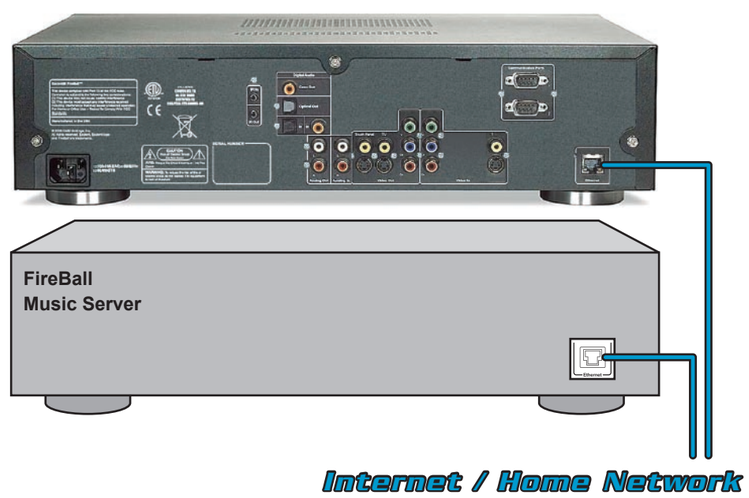

5. Connect FireBall to the Internet

Note: FireBall requires an Internet connection to play Internet radio stations, and for general system maintenance.

- If you have a broadband (cable, DSL, ISDN) Internet Service Provider, connect the included ethernet cable from FireBall's ethernet jack to your ethernet network.
- If you have a Dialup Internet Service Provider, you'll need to configure Internet connection sharing on a PC connected to the phoneline.

Note: You may need to purchase additional network hardware such as a "router". Please contact your Escient dealer for more information.

6. Power Up!

- Plug FireBall into an AC outlet.
- The Standby LED on the front of the FireBall will begin to flash RED during the power on cycle. When the LED turns solid RED, the FireBall is ready for use.
- Press the power button on the front panel or on the remote control. The LED will turn solid BLUE and video will be displayed on the TV when the unit is on.

Note: You may have to press the "FB1" button on the remote to configure it to control FireBall. Also be sure the TV and receiver are turned on and set to the correct FireBall input.

7. Quick Start

- Use the remote control and follow the on-screen instructions.

Note: The MP-200 requires an Internet connection to complete the registration process. If the Internet connection method is dialup then an external modem must be used with the MP-200. An alternate method would be to use Internet connection sharing via a PC or dialup router. Contact your Escient dealer for more information.

FireBall™ MP-200 Digital Media Player

Time For Fun

ESCIENT
6640 Intech Blvd., Indianapolis, Indiana 46278
Phone: 800-372-4368 Press "3" For Support
Hours: Monday - Friday 9:00am - 7pm EST
Fax: 317-616-6790
www.escient.com
Email: support@escient.com
Document Number: M22150-02A1
February 2006

Remote Overview

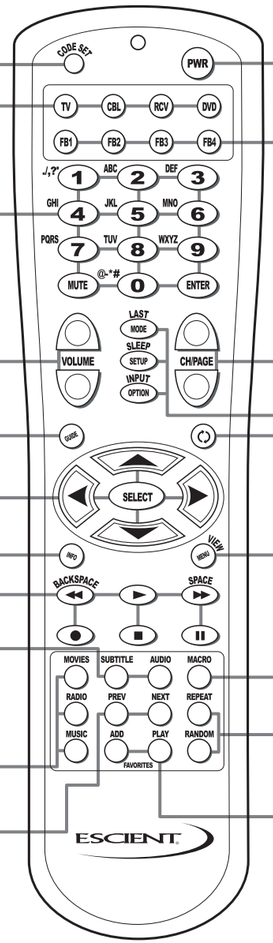

CODE SET
Code Set - used to set the universal IR source buttons. See manual for details.

UNIVERSAL SOURCE SELECT
TV / Cable / Receiver / DVD - used to configure the remote to control other devices. See manual for details on the universal remote functions.

KEY PAD
Alpha / Numeric / Enter - used for entering numbers and text. Also used for searching in the movies, music and radio guides.

VOLUME CONTROL
Volume Up / Volume Down / Mute - Universal remote can be configured to operate volume on TVs and receivers. See manual for detailed setup steps.

GUIDE
Guide / Player - toggles between Guide and Player screens.

NAVIGATION & SELECT
Up / Down / Left / Right / Select - used to navigate and select on-screen menus and buttons.

INFO
Info - displays additional movie and music info.

TRANSPORT CONTROLS
Rewind / Play / Forward / Record / Stop / Pause - used to control playback of movies and music. Also used for text entry and for canceling certain operations.

DVD FUNCTIONS
Subtitle / Audio - used to toggle subtitle and audio tracks on and off when watching a movie.

DVDM-552 GUIDE SELECT
Movies / iRadio / Music - used to select DVDM modes.

DISC PLAY FUNCTIONS
Previous / Next - skip disc functions.

POWER
Power - used to toggle the current source device on and off.

FIREBALL SELECT
FireBall 1 / FireBall 2 / FireBall 3 / FireBall 4 - use FB1 to control the DVDM. Use other FB buttons if additional FireBall products are installed.

CHANNEL / PAGE CONTROL
Channel/Page Up/Down - used to page up and down in Guide and Player screens.

CONTROL
Mode - changes music play modes: normal, random, repeat etc.
Setup - displays Setup menu.
Options - displays Options menu.

ALL / NONE
Toggle All or None on Select Guides.

VIEW / MENU
View / Menu - toggles through various guide views (artist, title, cover) and displays DVD menu when watching a movie.

MACRO FUNCTION
Macro Function - used to directly access various music, movie and radio items and controls.

MUSIC PLAY FUNCTIONS
Repeat / Random - used to cause the system to play the current group/genre in repeat or random playback mode.

MUSIC FAVORITES
Add-Favorites / Play-Favorites - used to add the currently highlighted music track to the Favorites playlist and to play the favorites playlist.

On-Screen Interface Overview

GUIDE

Movies Guide - Browse and manage your Movie collection

PLAYER

Movie Player - display full screen video (watch a movie)

OPTIONS

Movie Options - allows you to create custom groups, edit disc information and access other movie features

SETUP

Setup Menus - set user preferences and configure external changers

MOVIES

Multi-Zone DVDM and Changers required for Movie Control

MUSIC

Music Guide - Browse and manage your Music collection

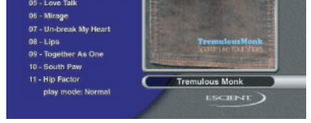
Sparkle Like Your Shoes
01 - Sparkle Like Your Shoes
02 - Drinking Holes
03 - Song For Betsy
04 - Don't Let Me Be Without...
05 - Love Talk
06 - Mirage
07 - Un-break My Heart
08 - Lips
09 - Together As One
10 - South Paw
11 - Hip Factor
play mode: Normal
Tremulous Monk

Music Player - display and control the currently playing music title

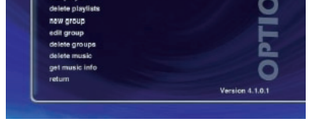

Music Options - allows you to create playlists and groups, edit disc information and access other music features

FireBall Media Server required for Music Control

RADIO

Radio Guide - browse and manage Internet Radio stations

Radio Player - displays the currently playing iRadio station, location, channels and speed (if available)

Radio Options - allows you to create custom groups, tune new stations and access other iRadio features

Broadband Internet connection required for Internet Radio Control

Watch a Movie

Multi-Zone DVDM and Changers required

- Press the Movies key on the remote.
- Highlight the Movie you want to watch.
- Press Play.
- The DVD movie will load and play.

Listen to Your Music

FireBall Media Server required

- Press the Music key on the remote.
- Highlight the Music Title you want to listen to.
- Press Play.
- The music begins to play.

Listen to an Internet Radio Station

Broadband Internet connection required

- Press the iRadio key on the remote.
- Highlight the Station you want to listen to.
- Press Play.
- FireBall will connect and begin to stream (play) the station.

PHYSITAL™ ENTERTAINMENT PRODUCT

ESCIENT movieDB

gracenote cddb®

©2006 Escient. All rights reserved. Escient and the Escient logo are registered trademarks and FireBall and Physital are trademarks of Digital Networks North America, Inc. All other trademarks are property of their respective owners. Escient reserves the right to change product hardware, features and software without notice. Upon any change, materials are updated as quickly as possible, but may not be reflected in documents already distributed. Supported hardware is updated continually. If you wish to interface with hardware that is not listed on this data sheet, please call Escient at 800.372.4368.